

Installation and User Guide

Optional Wall Mount Controls




Digital Metal Knob Control


XM

Contents

User Guide	01
Bill Of Material	02
Exploded View	02
Installation Procedure	03

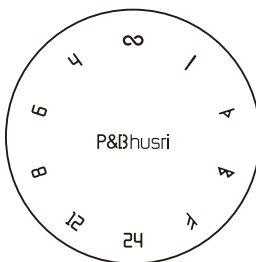


1. Power On

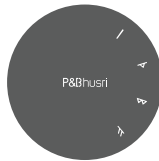

2. Thermoregulation



3. Timing

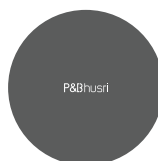

4. Power Off

1. Power On: Press the temperature control knob lightly to turn on the device. After powering on, the temperature indicator light and the time indicator light on the screen will illuminate.

2. Temperature Adjustment: When the device is powered on, rotating the temperature control knob will enter the temperature adjustment mode. Different temperature settings will flash, representing 4 temperature levels (| 3 4 5 6), with the corresponding temperatures being 39 °C, 42 °C, 45 °C, and 48 °C. After selecting the desired temperature, gently touch the temperature control knob or wait for 3 seconds without any operation to confirm the temperature setting. Once confirmed, the screen will return to the initial interface.


3. Timing: In the initial interface when the device is turned on, double-click the temperature control knob to enter the time adjustment mode. Different times will flash through 6 timing positions (∞ 4 6 8 12 24). Select the duration for heating. Lightly touch the temperature control knob or wait for 3 seconds without any operation to enter the corresponding timing state. Note: What is displayed on the screen is the remaining time. Note: The symbol ∞ represents continuous heating.

4. Power Off: When the device is powered on, by pressing and holding the temperature control knob for two to three seconds, the device will enter the power-off state. In the power-off state, the logo indicator light will be on, but there will be no temperature level indicator or remaining time indicator.

BILL OF MATERIAL

1		X1	2		X4	3		X1	4		X1
5		X2	6		X2	7		X1	8		

EXPLODED VIEW

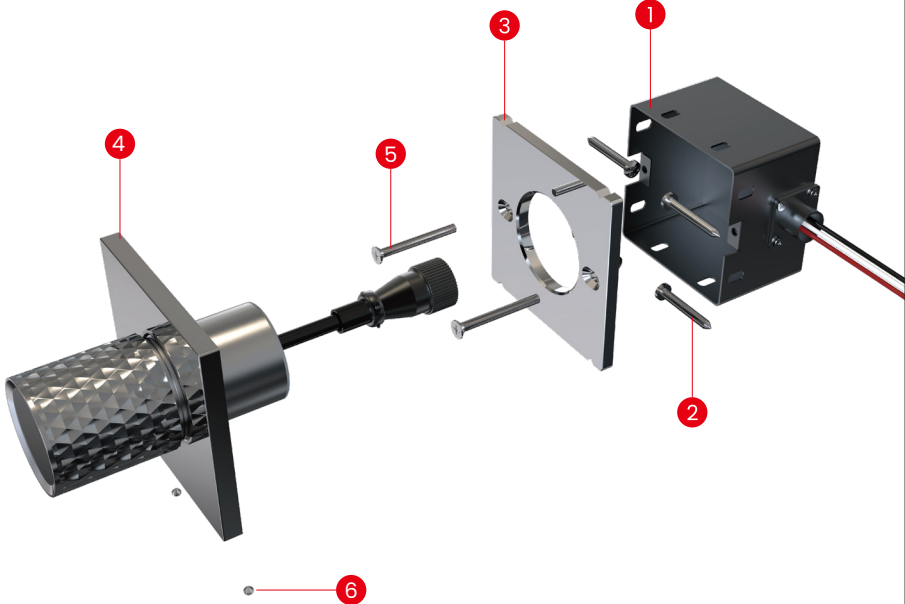


NOTE

Please specify the pre-installed cord length at the time of ordering: XM-TB-2 (2 meter cord), XM-TB-5 (5 meter cord), XM-TB-10 (10 meter cord), XM-TB-15 (15 meter cord).

1 Install XM-TB

Install the XM-TB in an appropriate position based on the specific product dimensions and wall conditions, and then secure it with screws.

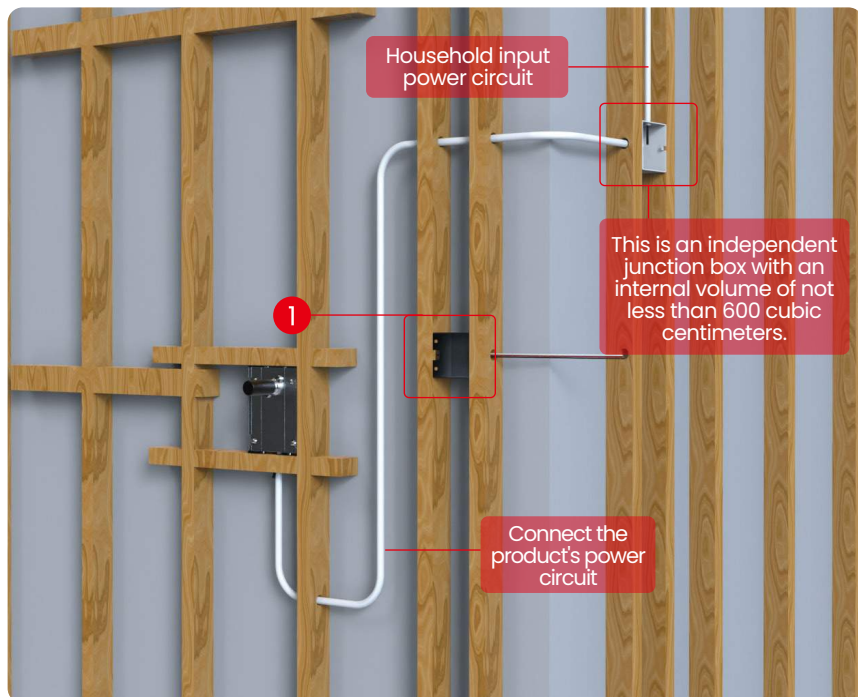


NOTE


Location of junction EMB05, XM-TB and junction box are for illustration purposes only. The location of the EMB05 is dictated by the connection point and final orientation of the particular towel warmer unit. The location of the XM-TB is dictated by the desired location of the finished controls. The independent junction box may be installed at a less conspicuous location as on-site applications and local codes permit.

2 Install The Conduit

Install a conduit between the fixed back box and the junction box.

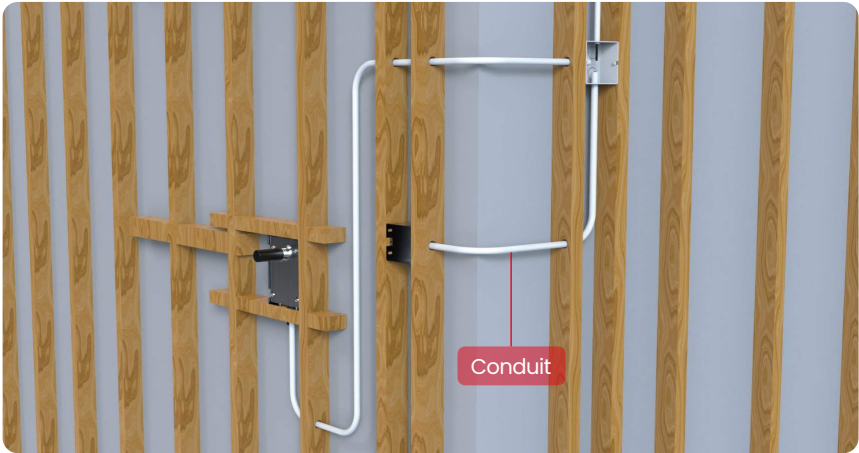

Guide the power cord of the XM-TB through the conduit and into the junction box.


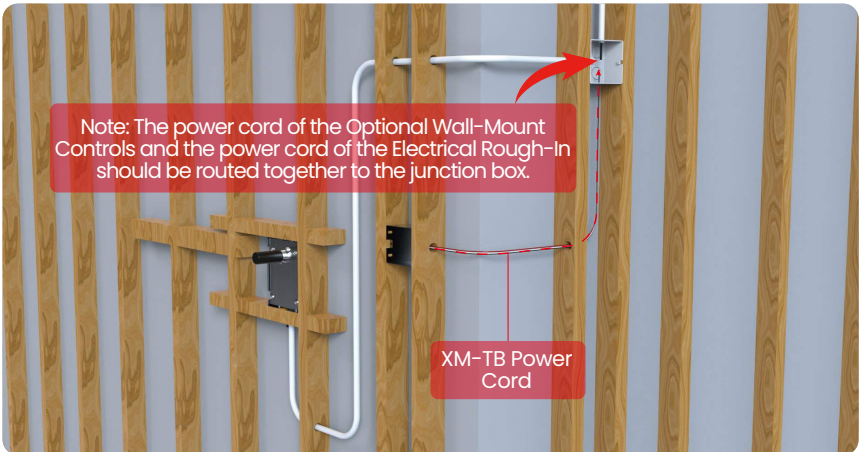


ⓘ NOTE

All wire lengths at the junction box must extend more than 6.3 in out of the box.


3 Install Drywall / Plasterboard

Finish the wall surface with drywall, ceramic tiles, or similar material. Cut an opening for the junction box at the corresponding position, and drill a hole for the rough-in threaded tailpiece connector and the Optional Wall-Mount Controls.

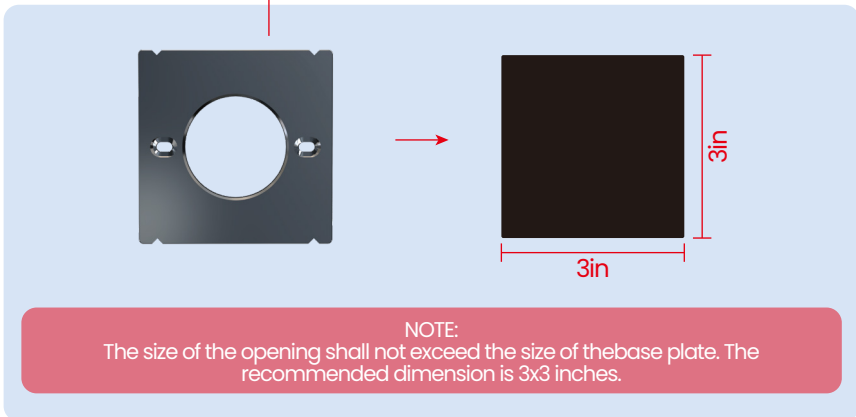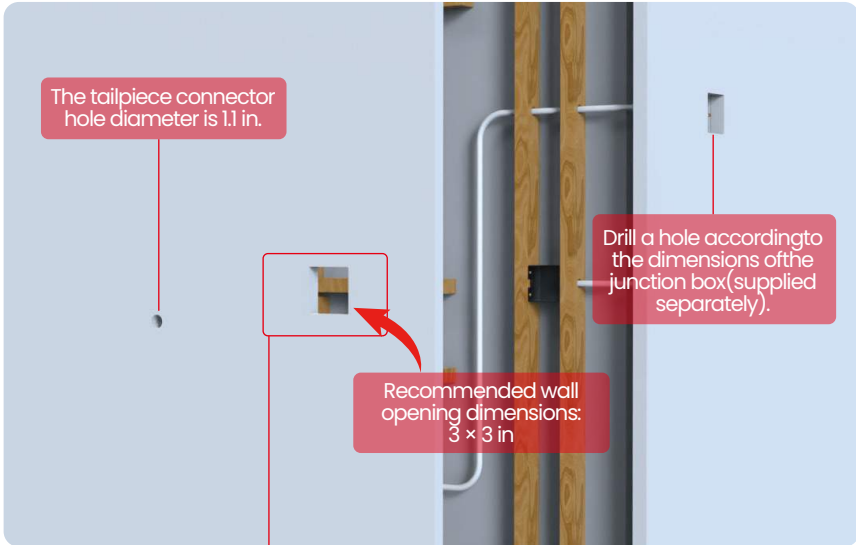

5 Installation of Digital Metal Knob Control

Connect the power connector of the Digital Metal Knob Control to the connector of the XM-TB.

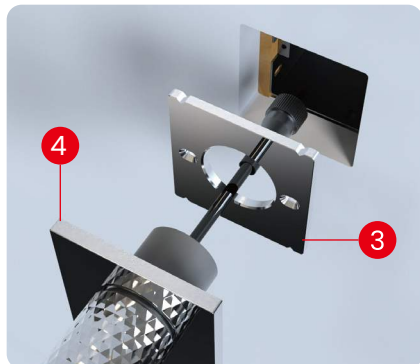


⚠ NOTE

The connectors of the Digital Metal Knob Control and the XM-TB must be properly matched one-to-one. Do not use excessive force during installation.



6 Secure the Digital Metal Knob Control

Secure the base plate to the XM-TB with screws, and press it firmly against the wall.

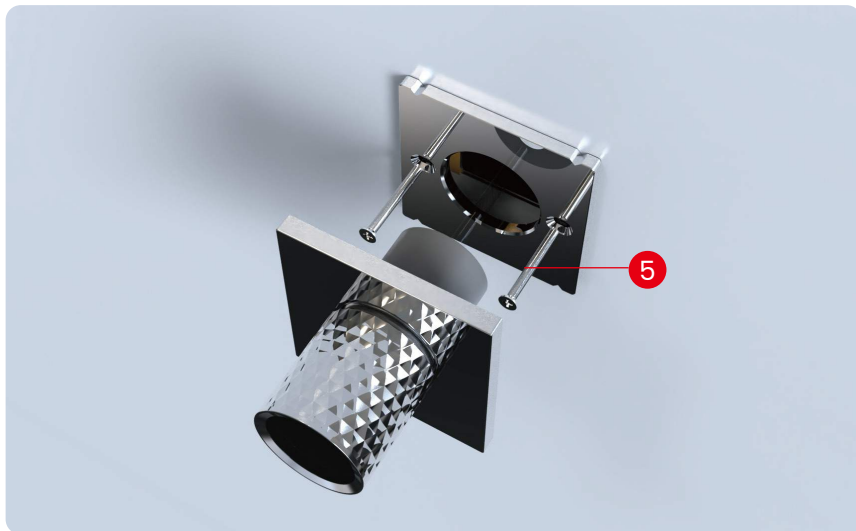

Secure the Digital Metal Knob Control with a set screw.

Installation completed.

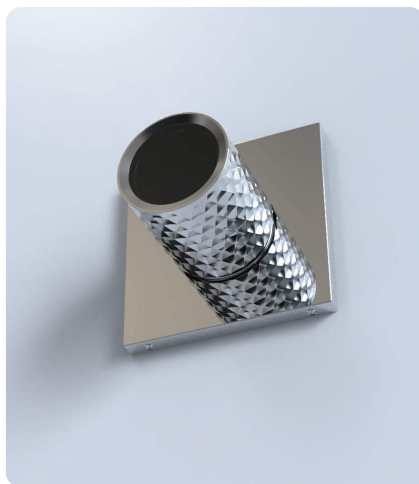
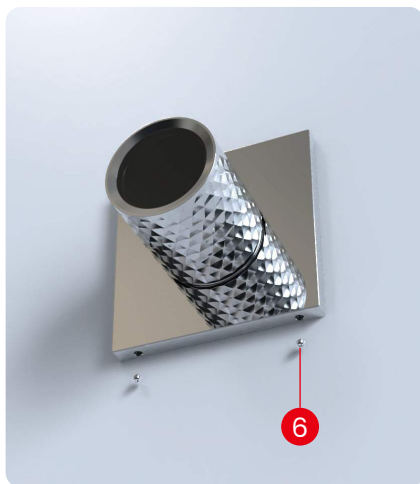


7 Connect the wires



NOTE

Verify the input, output, and other wires inside the junction box before wiring. Do not mix them up, and have a qualified electrician perform the connection.

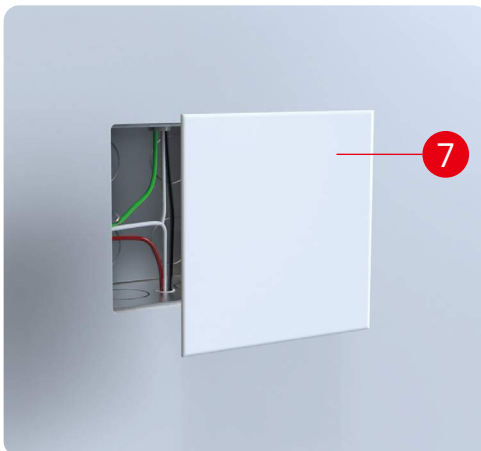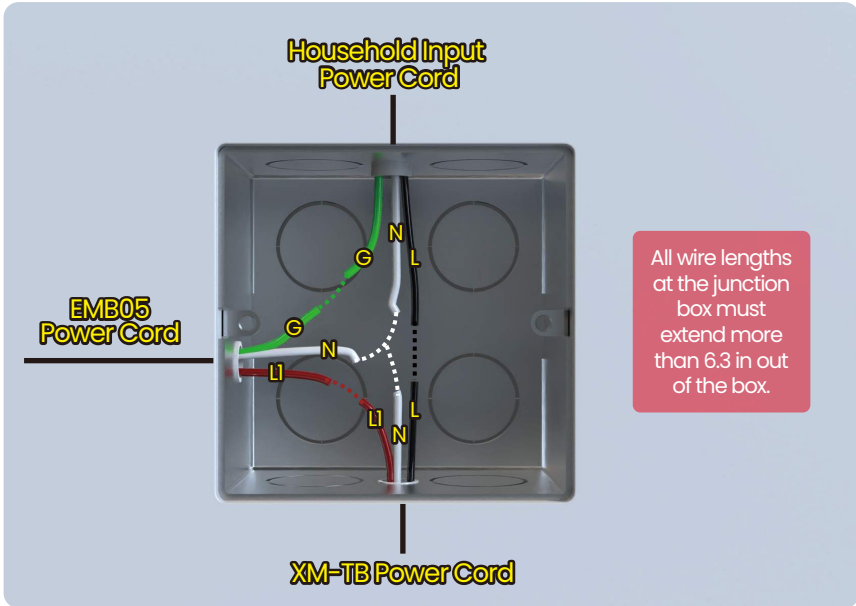

After wiring is complete, install a removable inspection window on the junction box for future maintenance.



After-sales service



After-sales service

CUSTOMER-SERVICE@PBHUSRI.COM