

Installation and User Guide

Optional Wall Mount Controls




Artistic Double Knob Control

XA

Contents

User Guide	01
Bill Of Material	02
Exploded View	02
Installation Procedure	03

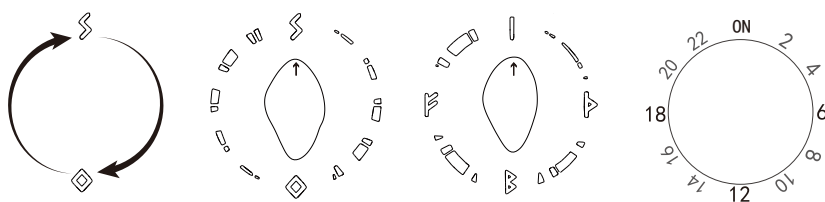

The direction pointed by the arrow on the knob is the starting point direction of the knob, and the direction of the knob's larger end is the direction indicating the function.

1. Power On: Power is turned on, the panel indicator lights come on, the color is white, and it enters standby mode.

2. Working status of the indicator light: The indicator light flashes when the product is in operation; it remains constantly illuminated during standby mode.

3. Temperature Adjustment: (Left knob)

These two settings are the standby modes. Within the right half of the knob, turning it clockwise increases the temperature, while counterclockwise rotation decreases the temperature.

Within the left half of the knob, turning it clockwise increases the temperature, and counterclockwise rotation decreases the temperature.

4. Timing: (Right knob)

This setting is a long-on mode. There are a total of 12 gears. By turning the knob clockwise, the corresponding timing durations for each gear are: 2 - 4 - 6 - 8 - 10 - 12 - 14 - 16 - 18 - 20 - 22 hours.

Among them, the symbol corresponds to a 6-hour interval, the symbol corresponds to a 12-hour interval, and the symbol corresponds to a 18-hour interval. You can quickly find the timing gear position by using these three symbol gears.


5. Reset instructions after timer ends:

When the product operates at the current power level for the specified duration, the heating will be turned off. The indicator light will enter a constant-on state. By rotating either the temperature adjustment knob or the timer knob, you can restart at the current setting.

BILL OF MATERIAL

1		X1	2		X4	3		X2	4		X1
5		X1	6		X2	7		X1	8		X1

EXPLODED VIEW


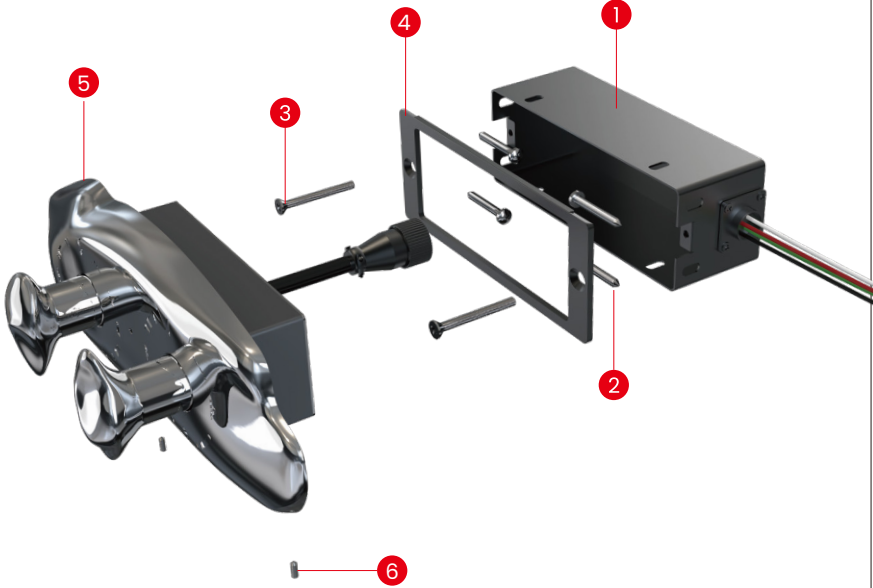


NOTE

Please specify the pre-installed cord length at the time of ordering: XA-TB-2 (2 meter cord), XA-TB-5 (5 meter cord), XA-TB-10 (10 meter cord), XA-TB-15 (15 meter cord).

1 Install XA-TB

Install the XA-TB in an appropriate position based on the specific product dimensions and wall conditions, and then secure it with screws.

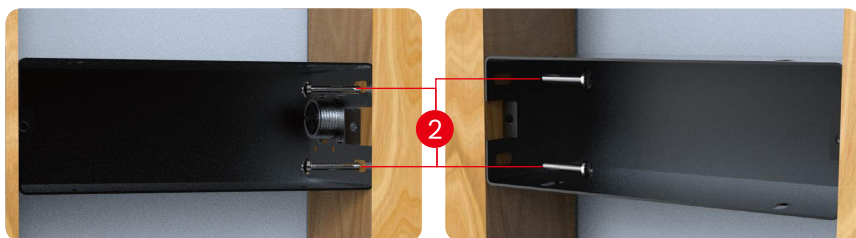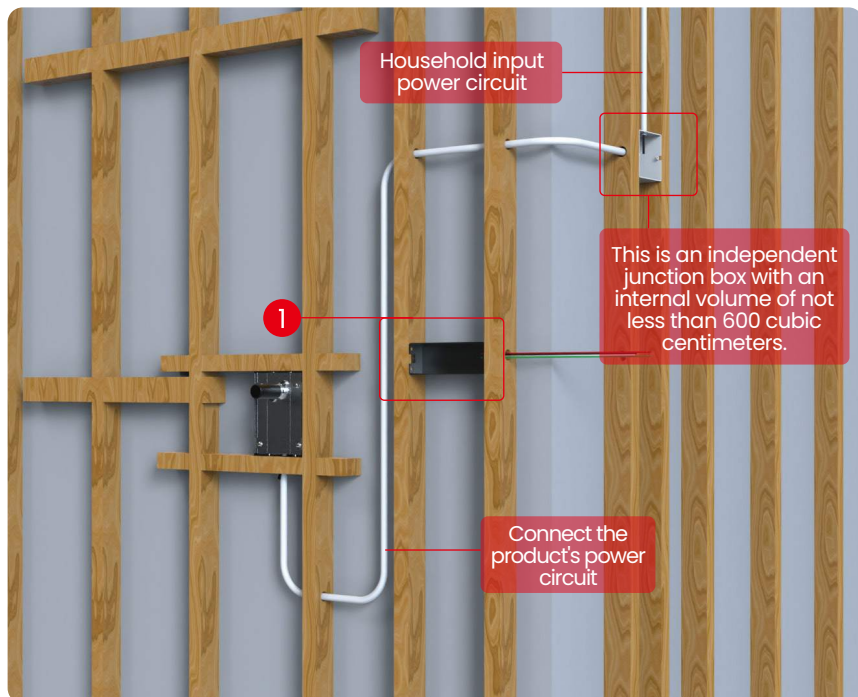


NOTE


Location of junction EMB05, XA-TB and junction box are for illustration purposes only. The location of the EMB05 is dictated by the connection point and final orientation of the particular towel warmer unit. The location of the XA-TB is dictated by the desired location of the finished controls. The independent junction box may be installed at a less conspicuous location as on-site applications and local codes permit.

2 Install The Conduit

Install a conduit between the fixed back box and the junction box.

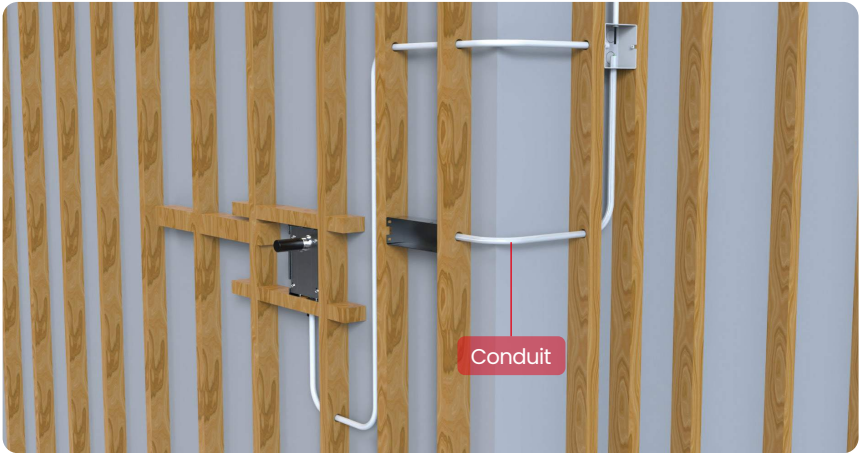

Guide the power cord of the XA-TB through the conduit and into the junction box.


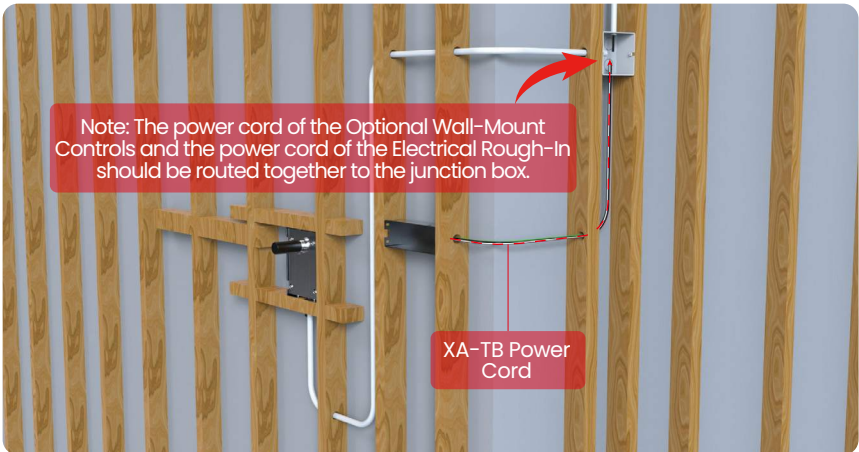


ⓘ NOTE

All wire lengths at the junction box must extend more than 6.3 in out of the box.

3 Install Drywall / Plasterboard

Finish the wall surface with drywall, ceramic tiles, or similar material. Cut an opening for the junction box at the corresponding position, and drill a hole for the rough-in threaded tailpiece connector and the Optional Wall-Mount Controls.

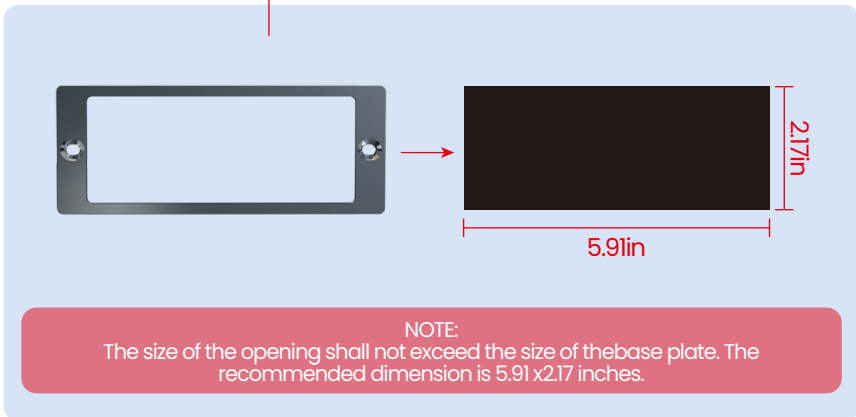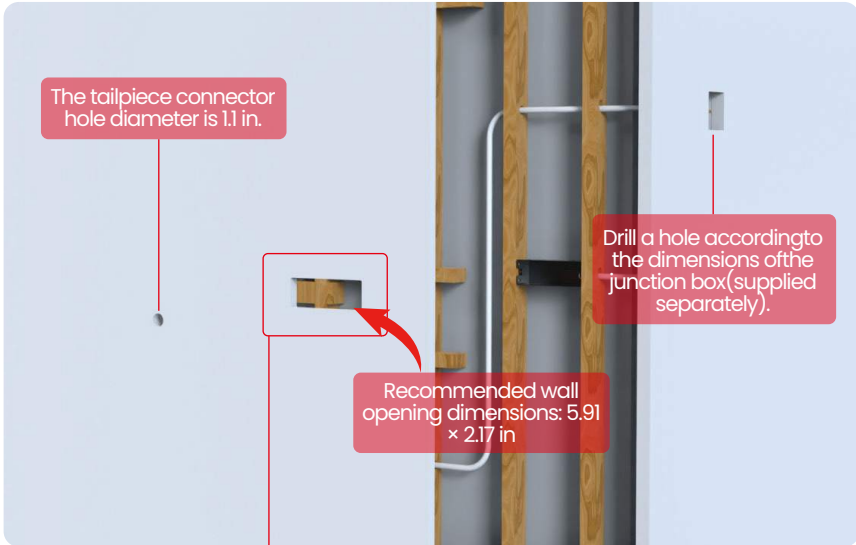

4 Install Base Plate

Secure the base plate to the XA-TB with screws, and press it firmly against the wall.



5 Installation of Artistic Double Knob Control

Connect the power connector of the Artistic Double Knob Control to the connector of the XA-TB.



⚠ NOTE

The connectors of the Artistic Double Knob Control and the XA-TB must be properly matched one-to-one. Do not use excessive force during installation.

6 Secure the Artistic Double Knob Control

Secure the Artistic Double Knob Control with a set screw.



Installation completed.





7 Connect the wires



NOTE

Verify the input, output, and other wires inside the junction box before wiring. Do not mix them up, and have a qualified electrician perform the connection.

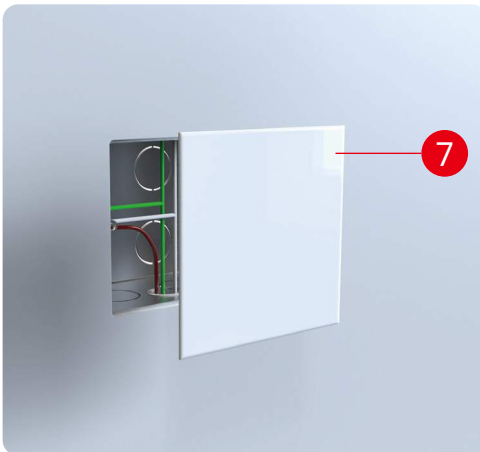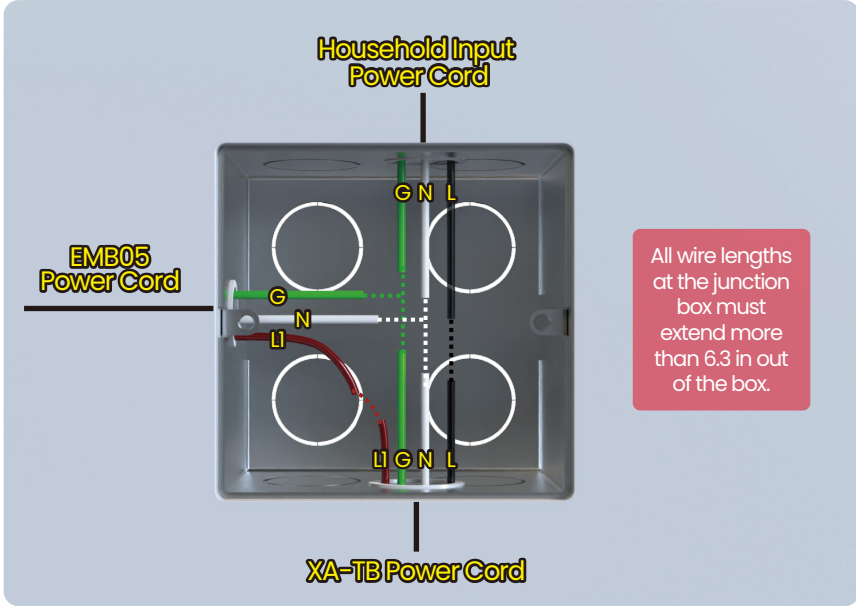

After wiring is complete, install a removable inspection window on the junction box for future maintenance.



After-sales service



After-sales service

CUSTOMER-SERVICE@PBHUSRI.COM